



KickStart Center Panel | Indiana FURNITURE

40" & 60" Panel Assembly Instructions

- 1 The #5540 and #5560 High Surround Panels are designed to be used in conjunction with Models #5502HL, #5502HR, #5503HL, and #5503HR. Each configuration will require a left (L) and right (R) seat.
- 2 Notice the black clips on the sides of the End Panel.
- 3 On the seats notice the metal screw/post that sticks out of the side of the surround.
- 4 Setup the seats so the Left seat is on the left and the Right seat is on the right. Slide them together to the End Panel.
- 5 Lift up the End Panel and align the 3 clips with the 3 posts on the seats.
- 6 Slide the End Panel down until it is touching the ground (#5560 models) or until it doesn't move down any more.
- 7 Check to make sure the clips and post are properly seated by trying to pull the End Panel away from the seat.

Note: If the seat and End Panel do separate, then slide the End Panel off and remount it to the seat. (Start back at step 5)

- 8 The End Panel should now be securely installed.

Model #5560 shown in instruction images.

