

# Spirit Seating

## User Instructions



### **A** Seat Height Adjustment

To raise the seat height, stand up or raise your body so there is no pressure on the seat. Lift the bar and raise the seat to the desired height.

To lower the seat height, sit in the chair to apply pressure on the seat. Lift the bar and lower the seat to the desired height.