


# Rockstar Seating

## User Instructions

### Control Adjustments

Rockstar chairs are available in a variety of control options. The following graphics will help you determine which control has been installed on your chair.

Synchro Tilt

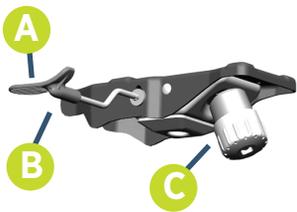


Weight-Activated



Synchro Tilt Comfort



Synchro Tilt Comfort with Seat Slider

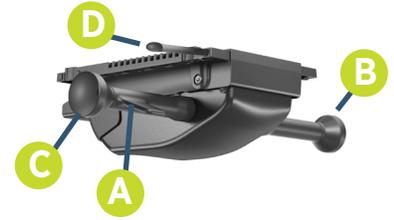

#### A Seat Height Adjustment

To raise the seat height, stand up or raise your body so there is no pressure on the seat. Lift the paddle and raise the seat to the desired height.

To lower the seat height, sit in the chair to apply pressure on the seat. Lift the paddle and lower the seat to the desired height.

#### B Tilt-Lock Adjustment

*On Swivel Tilt Models:*  
To tilt or recline, pull out the paddle/rod to unlock the back and allow recline. Push the paddle/rod in to lock the back in position.

*On Weight-Activated Models:*  
To tilt or recline, with the right hand, pull button outwards and unlock the tilt. To lock, bring the backrest to the desired position and, with your right hand, push button inwards.

*On Synchro Tilt Comfort Models:*  
While seated, turn the knob forward to lock the back in position. Turn the knob backward to tilt or recline.

#### C Tension Control

*On Swivel Tilt Models:*  
While seated, to tighten the tension, turn the knob counter-clockwise, to loosen the tension, turn the knob clockwise.

*On Weight-Activated Models:*  
Tension automatically adjusts once the user sits in the chair and engages recline. There is no lever or control paddle.

*On Synchro Tilt Comfort Models:*  
While seated, turn the knob forward to tighten the tension, turn the knob backward to loosen the tension.

#### D Seat Slider

While seated, push in the paddle and shift your body weight forward or backward to move the seat to the desired position.

Or, while standing and facing the chair, push in the paddle with one hand and move the seat to the desired position with the other.

### Arm Adjustments

There are multiple arm options available on Rockstar seating. Some of the arm styles offer height adjustability, while other offer height and width adjustability.



#### A Height Adjustment

To raise the arm height, push up the lever and raise the arm. To lower the arm height, push up the lever and lower the arm. Repeat for both arms.

#### B Width Adjustment

To move the arm out from the seat, push the lever forward and move the arm. To move the arm closer to the seat, push the lever forward and move the arm. Repeat for both arms.

Note: Actual color of control on product is black.