



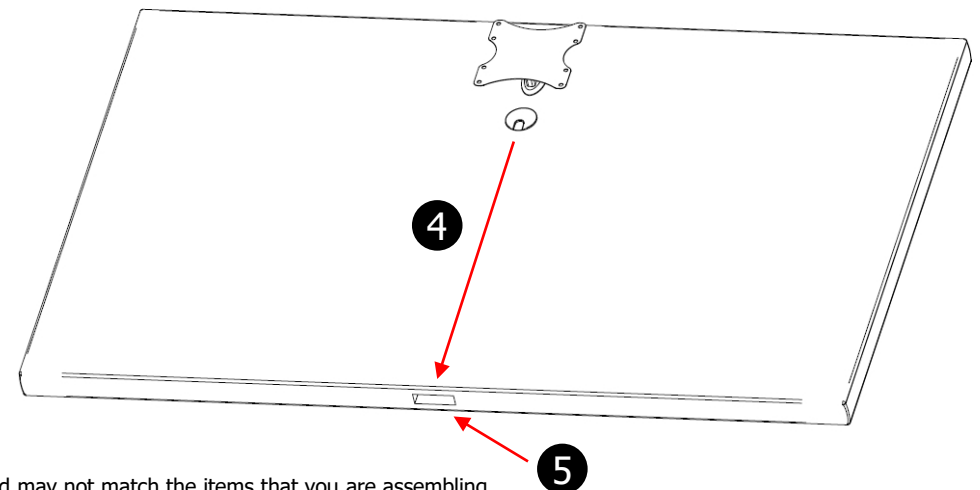

TV Wire Management Assembly Instructions

- 1 Remove Grommet Cover
- 2 Insert wires into grommet and feed wires through channel inside of the Center Panel.
- 3 Lay/Lean Center Panel to one side so that the wire opening at the bottom of the Center Panel is visible.
- 4 Continue to feed wires until the wires are visible through the wire opening.
- 5 Pull wires through wire opening
- 6 Reattach Grommet Cover

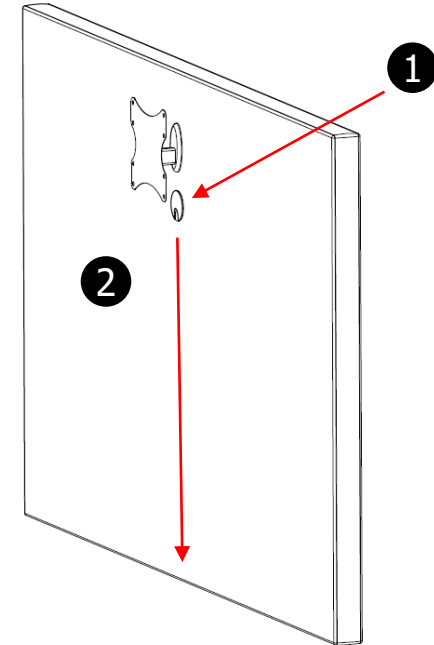

Note: Images shown are for clarity purposes only and may not match the items that you are assembling.

5