

Table Wire Management Assembly Instructions

1 Remove Grommet Cover

Note: For the high panel, if a TV Bracket was also ordered, there will be 2 grommets. This applies to the lower grommet.



2 Insert wires into grommet and feed wires through channel inside of the Center Panel.

3 Lay/Lean Center Panel to one side so that the wire opening at the bottom of the Center Panel is visible.

4 Continue to feed wires until the wires are visible through the wire opening.

5 Pull wires through wire opening

6 Reattach Grommet Cover

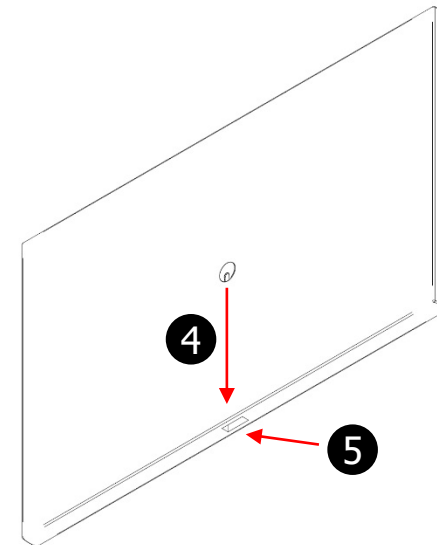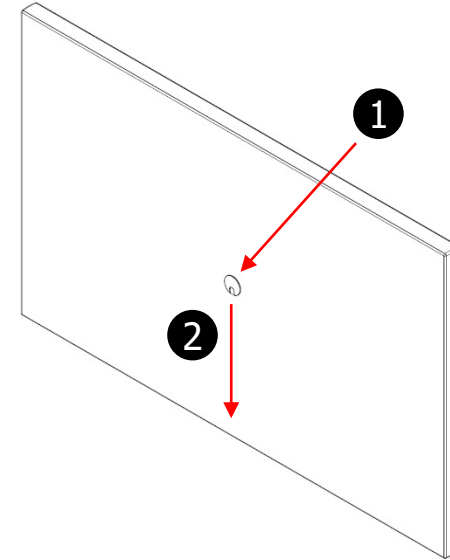

Note: Images shown are for clarity purposes only and may not match the items that you are assembling.