

# Jefferson | Indiana FURNITURE

## Bridge Unit Brackets Assembly Instructions


### Components:

- 12 – Screws, #8 x 5/8" PPH
- 1 – L Bracket
- 2 – Flat Plates 2" x 6"
- 4 – Flat Plates 4" x 4"

### Applies to:

- Credenza & Bridge Unit & Pedestal Desk
- Corner Unit & Bridge Unit & Credenza
- Corner Unit & Bridge Unit & Pedestal Desk
- P-Top Desk & Bridge Unit & Credenza

**1** Attach the short edge of the L bracket to the face of the upright of the desk with the top edge of the bracket flush with the underside of the top as shown.

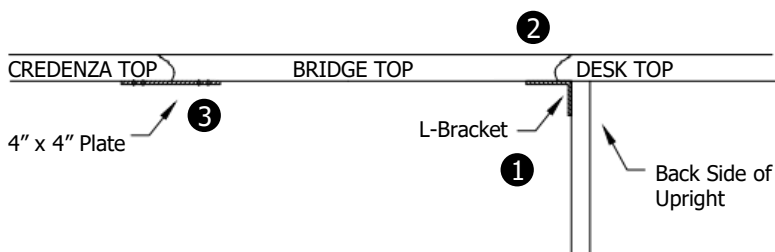

**2** Attach the bridge top to the extended part of the L bracket.

**3** Attach the other end of the bridge top to the credenza top using two 4 x 4 flat plates with one 4 x 4 plate 2" from using side and one 4 x 4 plate 2" in from the back edge.

**4** Attach one end of the bridge back panel to the desk end panel and the other end to the credenza end panel using one 2 x 6 flat plate on each end.

