

Modular Base Units Assembly Instructions

Components:

- 8 – Base Screws, #8 x 1 3/8" PFH

If unit has a "modular file"

- 10 – Screws, #8 x 1 3/8" PFH

If unit has a "modular storage cabinet"

- 10 – Screws, #8 x 5/8" PPH
- 2 – Screws, #8 x 1 3/8" PFH

Units Required:

- 1 – Modular Storage Cabinet or Modular File
- 1 – Modular Cabinet / Credenza Base
- 1 – Modular Cabinet / Credenza Top

1 To assemble cabinet to top center the top of the cabinet from front to back and side to side with approximately 3/4" spacing all around.


2 If a "modular file", insert screws through mounting rails and fasten cabinet to the top.

If a "modular storage cabinet", insert 5/8" screws through the metal brackets on the end and back panel and two 1 3/8" screws through the top front rail and fasten the cabinet to the top.

3 To assemble the cabinet to the base assembly turn the cabinet upside down and align the base on the cabinet.

4 Insert the screws through the mounting strips on the base and fasten to the cabinet.

5 Insert levelers into base assembly, then turn the entire unit upright. Position and level the unit as needed.

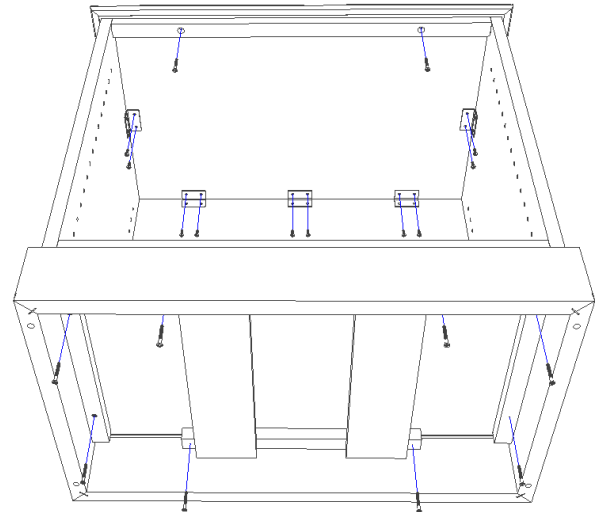

Modular Storage Cabinet Shown
(Doors Removed for Clarity)