

# Modular Double Base Units with Kneespace Assembly Instructions

## Components:

- 16 – Base Assembly Screws, #8 x 1 3/8" PFH

*If unit has a "modular file"*

- 10 – Screws, #8 x 1 3/8" PFH (Quantity Per Cabinet)

*If unit has a "modular storage cabinet"*

- 10 – Screws, #8 x 5/8" PPH (Quantity Per Cabinet)
- 2 – Screws, #8 x 1 3/8" PFH (Quantity Per Cabinet)

## Units Required:

- 2 – Modular Storage Cabinet or Modular File
- 2 – Modular Cabinet / Credenza Base
- 1 – Modular Triple Cabinet / Credenza Top

**1** If installing two cabinets with a space between them, both cabinets are inset 3/4" from each end of the top and 3/4" from the front of the top.

**2** If a "modular file", insert screws through mounting rails and fasten cabinet to the top.


If a "modular storage cabinet", insert 5/8" screws through the metal brackets on the end and back panel and two 1 3/8" screws through the top front rail and fasten the cabinet to the top.

**3** To assemble to base assemblies to the cabinets, turn the cabinets upside down and align the base assemblies on the cabinets.

**4** Insert the screws through the mounting strips on the bases and fasten to the cabinets. (as shown)

**5** Insert levelers into the base assemblies.

**6** Turn the entire unit to the upright position and level as needed.

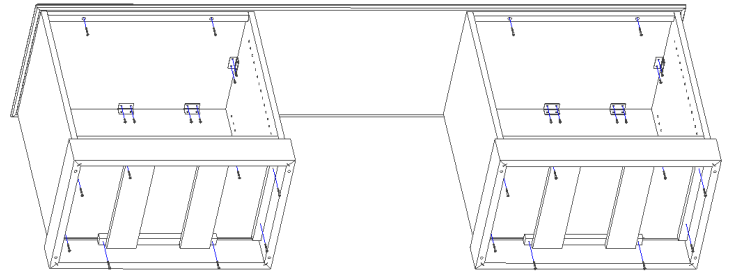

Modular Storage Cabinet Shown

(Doors Removed for Clarity)