

Modular Double or Triple Base Units Assembly Instructions

Components:

- 8 – Base Screws, #8 x 1 3/8" PFH (Quantity Per Cabinet)

If unit has a "modular file"

- 10 – Screws, #8 x 1 3/8" PFH (Quantity Per Cabinet)

If unit has a "modular storage cabinet"

- 10 – Screws, #8 x 5/8" PPH (Quantity Per Cabinet)
- 2 – Screws, #8 x 1 3/8" PFH (Quantity Per Cabinet)


Units Required:

- 2 or 3 – Modular Storage Cabinet or Modular File
- 1 – Modular Double or Triple Cabinet / Credenza Base
- 1 – Modular Double or Triple Cabinet / Credenza Top

- 1 Stand the cabinets upright next to one another.
- 2 Align the cabinets flush with one another side by side. You may have to use a bar clamp or a strap clamp to temporarily hold the cabinets tightly together.
- 3 Fasten the units together by drilling pilot holes and inserting four 1 3/8" screws through the cabinet's end.
- 4 To assemble cabinet to top center the top on the cabinet from front to back and side to side with approximately 3/4" spacing all around.
- 5 If a modular unit or file, insert screws through mounting rails and fasten cabinet to the top.

If a modular storage, insert 5/8" screws through the metal brackets on the end and back panel and two 1 3/8" screws through the top front rail and fasten the cabinet to the top.

- 6 To assemble the cabinet to the base assembly turn the cabinet upside down and align the base on the cabinet.
- 7 Insert the screws through the mounting strips on the base and fasten to the cabinet.
- 8 Insert levelers into base assembly, then turn the entire unit upright. Position and level the unit as needed.

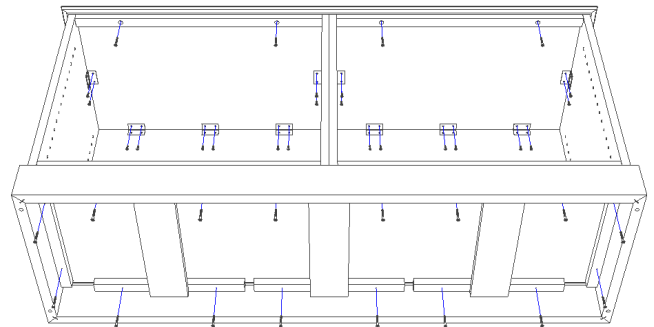

Double Modular Storage Cabinet Shown

(Doors Removed for Clarity)