

# Work Table Installation Instructions 2298-66001

## Parts List:

KD, MODEZ POST, 15.9MM X 5MM TH  
Bracket, L, 8.95"L X1"X1", Alloy  
Bracket, L, 42.53"L X1"X1", Alloy  
Screw #6 X 1/2 PPH DT Zinc


## Single Modesty Installation

**Step 1:** Screw KD, MODEZ POST into End panels using pre-drilled locations.

**Step 2:** Attach the Modesty Panel and End Panels together by inserting the KD MODEZ POST on the End Panels into the KD MODEZ CLIP of the Modesty Panel and slide down until top and bottom edges of Modesty Panel and End Panels are flush.

**Step 3:** Place top onto assembled Modesty and Ends centering left to right and front to back.

**Step 4:** Attach top with "L" Brackets to end panels and modesty in the knee space. (see below for placement of "L" Brackets)

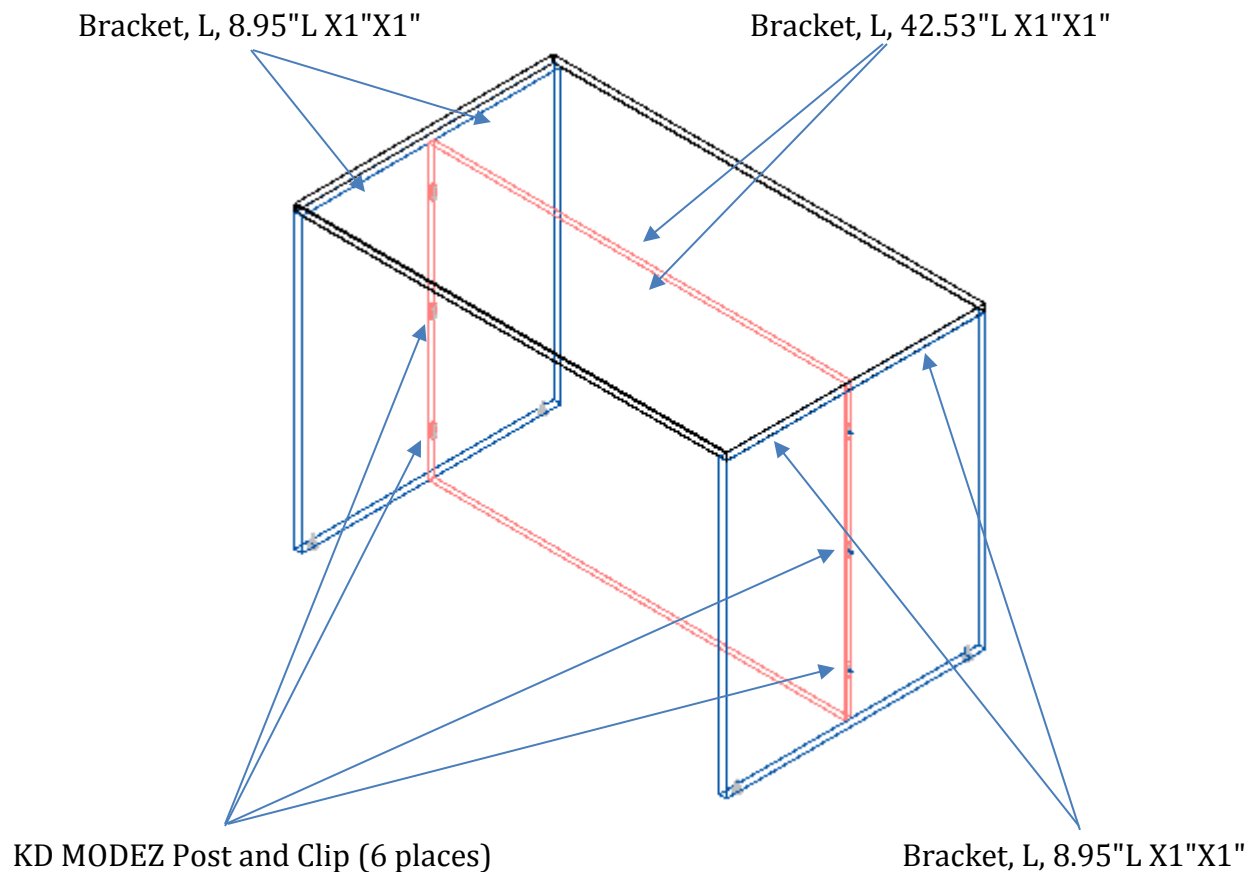

## Double Modesty with Power and Data Installation

**Step 1:** Screw KD, MODEZ POST into End panels using pre-drilled locations.

**Step 2:** Attach the Modesty Panels and End Panels together by inserting the KD MODEZ POST on the End Panels into the KD MODEZ CLIP of the Modesty Panels and slide down until top and bottom edges of Modesty Panels and End Panels are flush.

**Step 3:** Insert power and data to top panel.

**Step 4:** Place top onto assembled Modesty and Ends centering left to right and front to back.

**Step 5:** Attach top with "L" Brackets to end panels and modesty panels in the knee space.  
(see below for placement of "L" Brackets)

