

# Work Wall Installation Instructions 2298-66014


## Parts List:

Tool Rail, Aluminum  
Screw, Tek #8 X 1 1/2 Pph Zinc  
Tack Board/Dry Erase Board


## Work Wall above 30" Work Surface

**Step 1:** Level and attach Tool Rail to wall at 9" from work surface to bottom of Tool Rail with Screw, Tek #8 X 1 1/2 Pph making sure to drive screw into wall stud. Use the v-groove in tool rail flange for locating screw up and down. Recommended to put a screw in both top and bottom v-groove in each stud.

**Step 2:** Remove tape from Velcro on back of Tack Board/Dry Erase Board and apply to wall keeping edges flush with ends of Tool Rail.

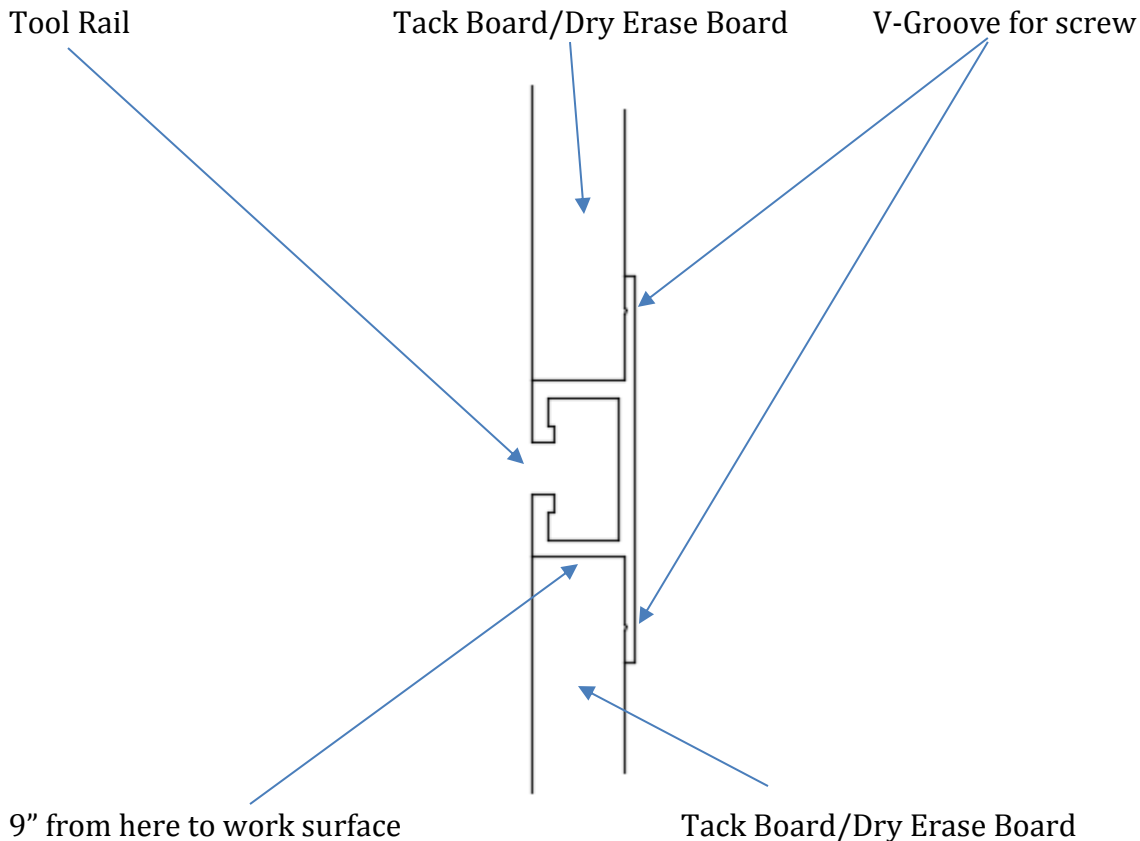


## Work Wall above 30" Work Surface

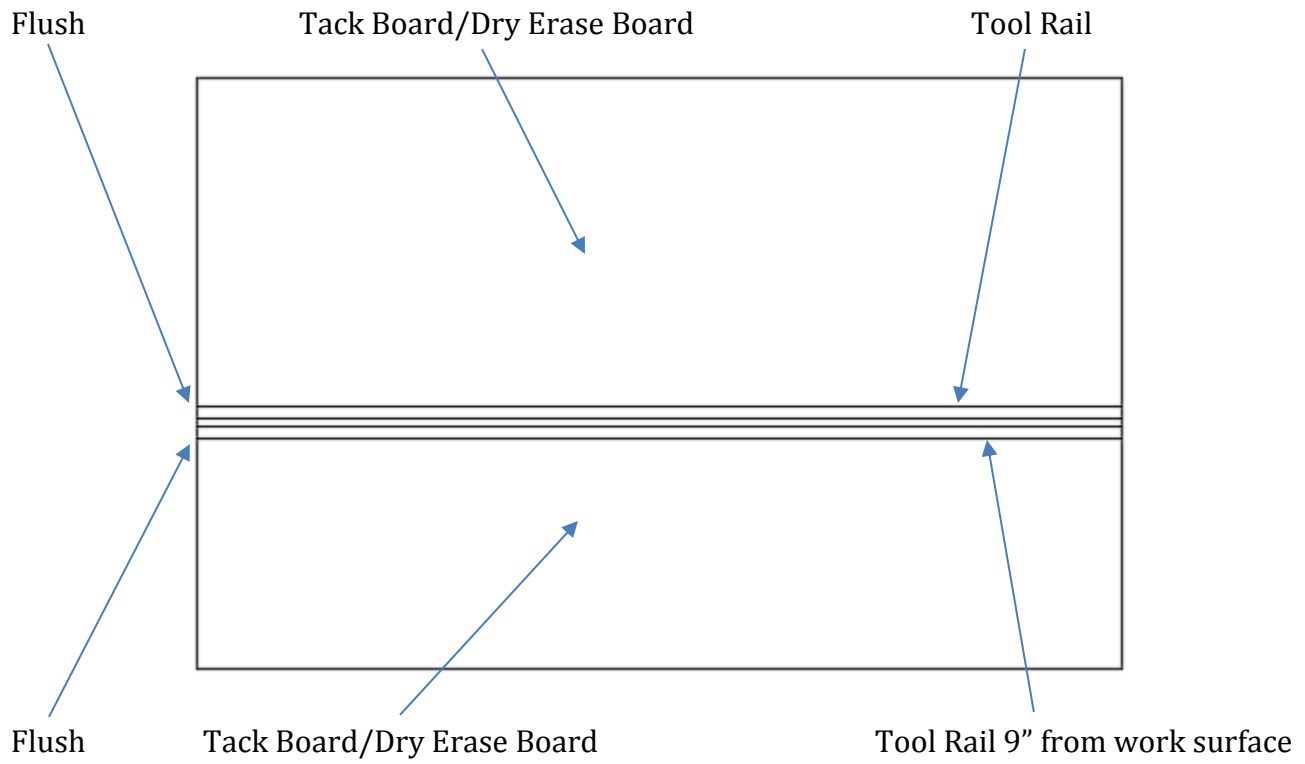

## Work Wall above 21" Work Surface

**Step 1:** Level and attach Tool Rail to wall at 17" from work surface to bottom of Tool Rail with Screw, Tek #8 X 1 1/2 Pph making sure to drive screw into wall stud. Use the v-groove in tool rail flange for locating screw up and down. Recommended to put a screw in both top and bottom v-groove in each stud.

**Step 2:** Remove tape from Velcro on back of Tack Board/Dry Erase Board and apply to wall keeping edges flush with ends of Tool Rail.

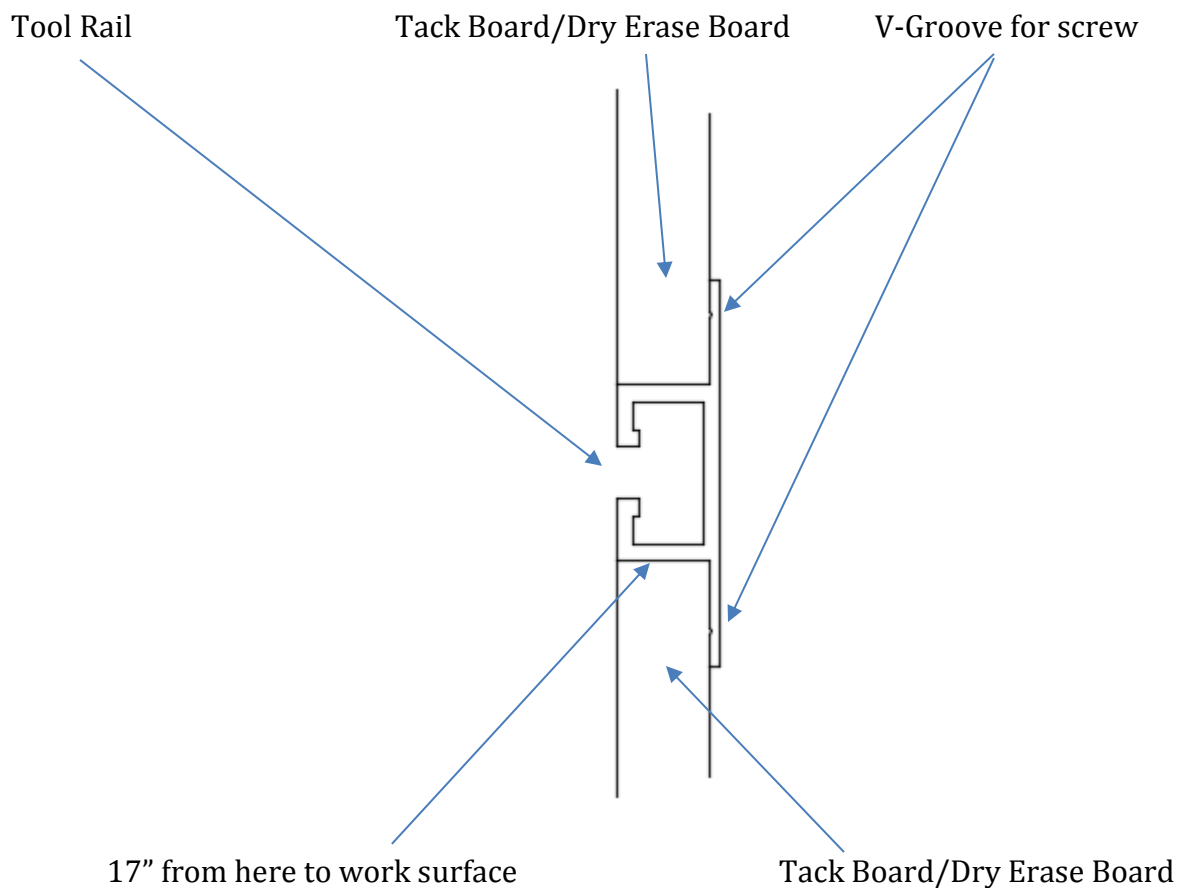

## Work Wall above 21" Work Surface

