


1/4 Acrylic Privacy Panel | Indiana FURNITURE

Assembly Instructions

Components:

- Screen Block with Holes, 3/8 x 1 1/4 x 5
- Screen Block with Pockets, 3/8 x 1 1/4 x 5
- #8-32 x 1/2 Hex Drive Button Head Cap Screws
- Non-Marring Adhesive Strip, 3M, #4492B

- 1 Insert screw into Screen Block with Holes (Screw #8-32 X 1/2" Hex Drive Button Head Cap Screw)
- 2 Place Privacy Panel on to screws where panel is slotted.
- 3 Insert Screen Block with Pockets to other side of Privacy Panel with pockets facing to bottom edge of panel.
- 4 Tighten screws to secure Privacy Panel between Screen Blocks keeping blocks and privacy panel flush on the bottom.
- 5 Place Screen onto work surface.
- 6 Units with more than two Screen Blocks may need final adjustment of the Screen Block in the slots of the Privacy Screen to allow all Blocks to properly fit against work surface.
- 7 After adjusting add options non-marring adhesive strip, 3M #4492B, to bottom of Blocks and set onto work surface at desired location.

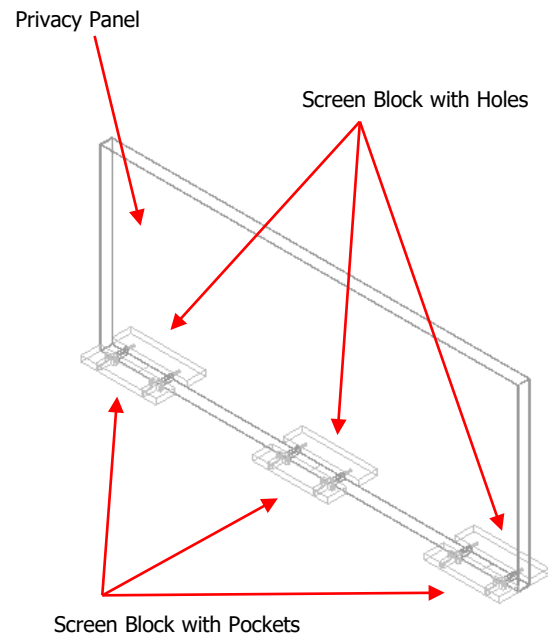

NOTE: Location and number of Screen Blocks required will be determined by the machining in the privacy screen.