


620-000GB Attachment Assembly Instructions

Attachment:

For units without 'Plinth' option skip to page # 2

Note: These instructions only show how to attach the 620-000GB kit to the arm sides of a chair. For attaching the kit to an ottoman please see the appropriate ottoman instructions.


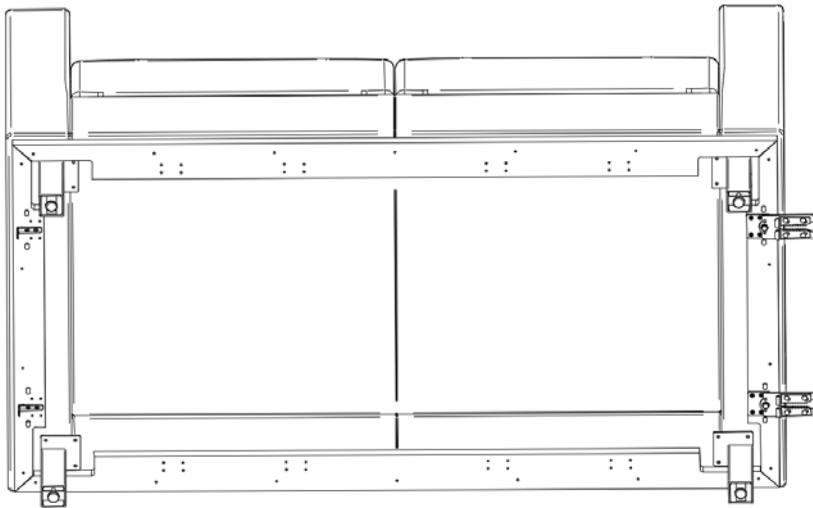


For all chairs: the 2-prong side of the ganging brackets always goes on the right side of the chair (when facing the front). The 'L' bracket side always goes on the left side of the chair.



Note: Images shown are for clarity purposes only and may not match the unit that you are currently ganging together.

With Plinth:


- 1 Start by flipping the chair over.
- 2 Attach the 'L' brackets to the appropriate holes on the left side of the plinth. Use the #8 x 1-1/2" long screws to attach the brackets.

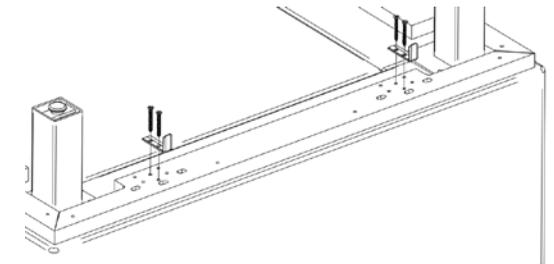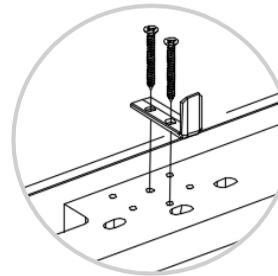

- 3 Attach the 2-prong part of the ganging brackets to the appropriate holes on the right side of the plinth. Use the #8 x 1-1/2" long screws to install the brackets.

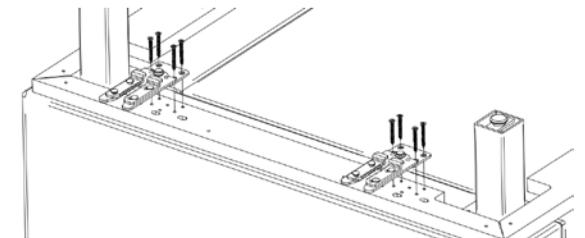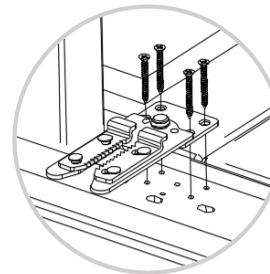


- 4 Flip the chair back upright. This chair is ready for ganging. *See General Ganging Instructions.*

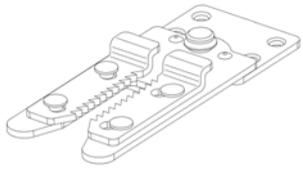


620-000GB Attachment Assembly Instructions

Without Plinth:


- 1 Start by printing out the templates on Pages #3-4. Make sure they measure to the correct size on the template.
- 2 Flip the chair over.
- 3 Use the templates to mark the bottom side of the chair.

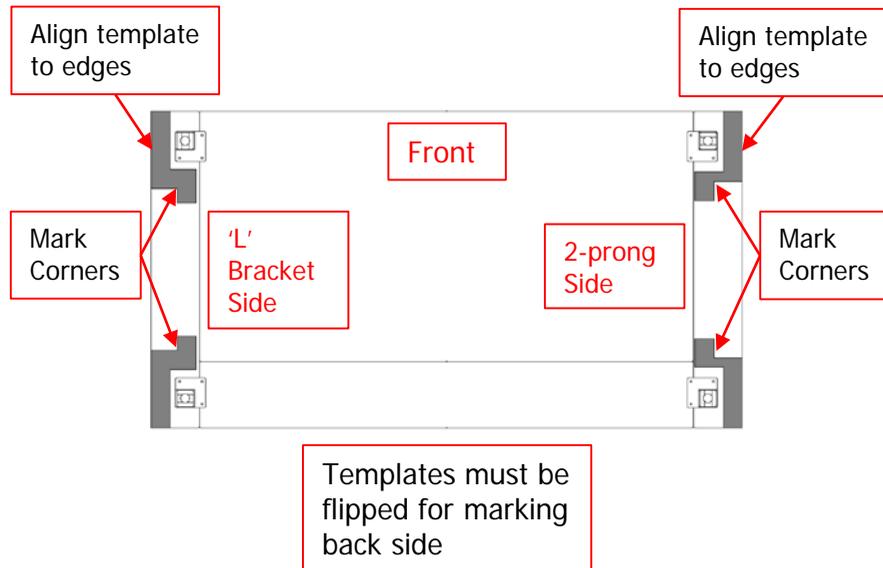

- 4 Position the metal 'L' bracket to the lines drawn and attach it with the #8 x 1-1/2" screws.

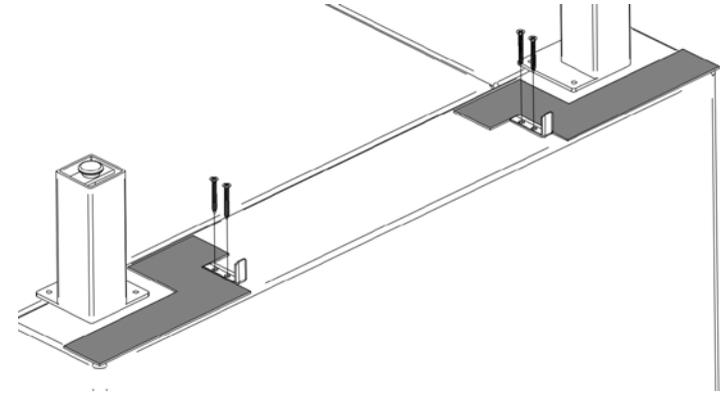


- 5 Attach the 2-prong ganging bracket using the #8 x 1-1/2" long screws.

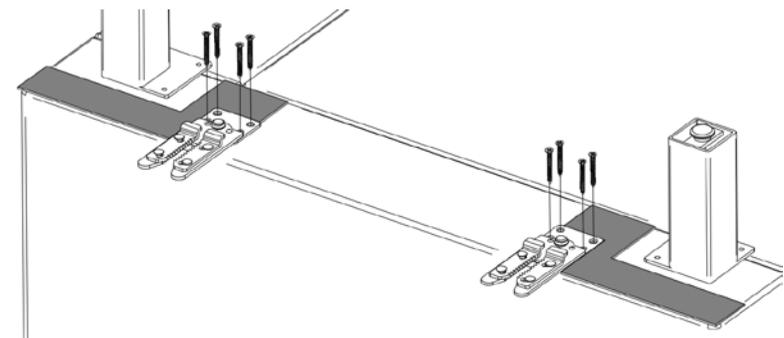

- 6 Flip the chair back upright. This chair is ready for ganging. *See General Ganging Instructions.*

Note: Images shown are for clarity purposes only and may not match the units that you are currently ganging together.

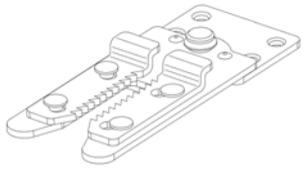



620-000GB Attachment Assembly Instructions



- 1 Print out this template at full size. Make sure the 1" square actually measures 1".
- 2 Then cut out the template along the solid black outline.
- 3 It is best to verify the two dimensions shown on the template. These should be within 1/16" of the value shown.

For multiple installs it is advised to print this template out on heavy cardstock or transfer it to a piece of wood.

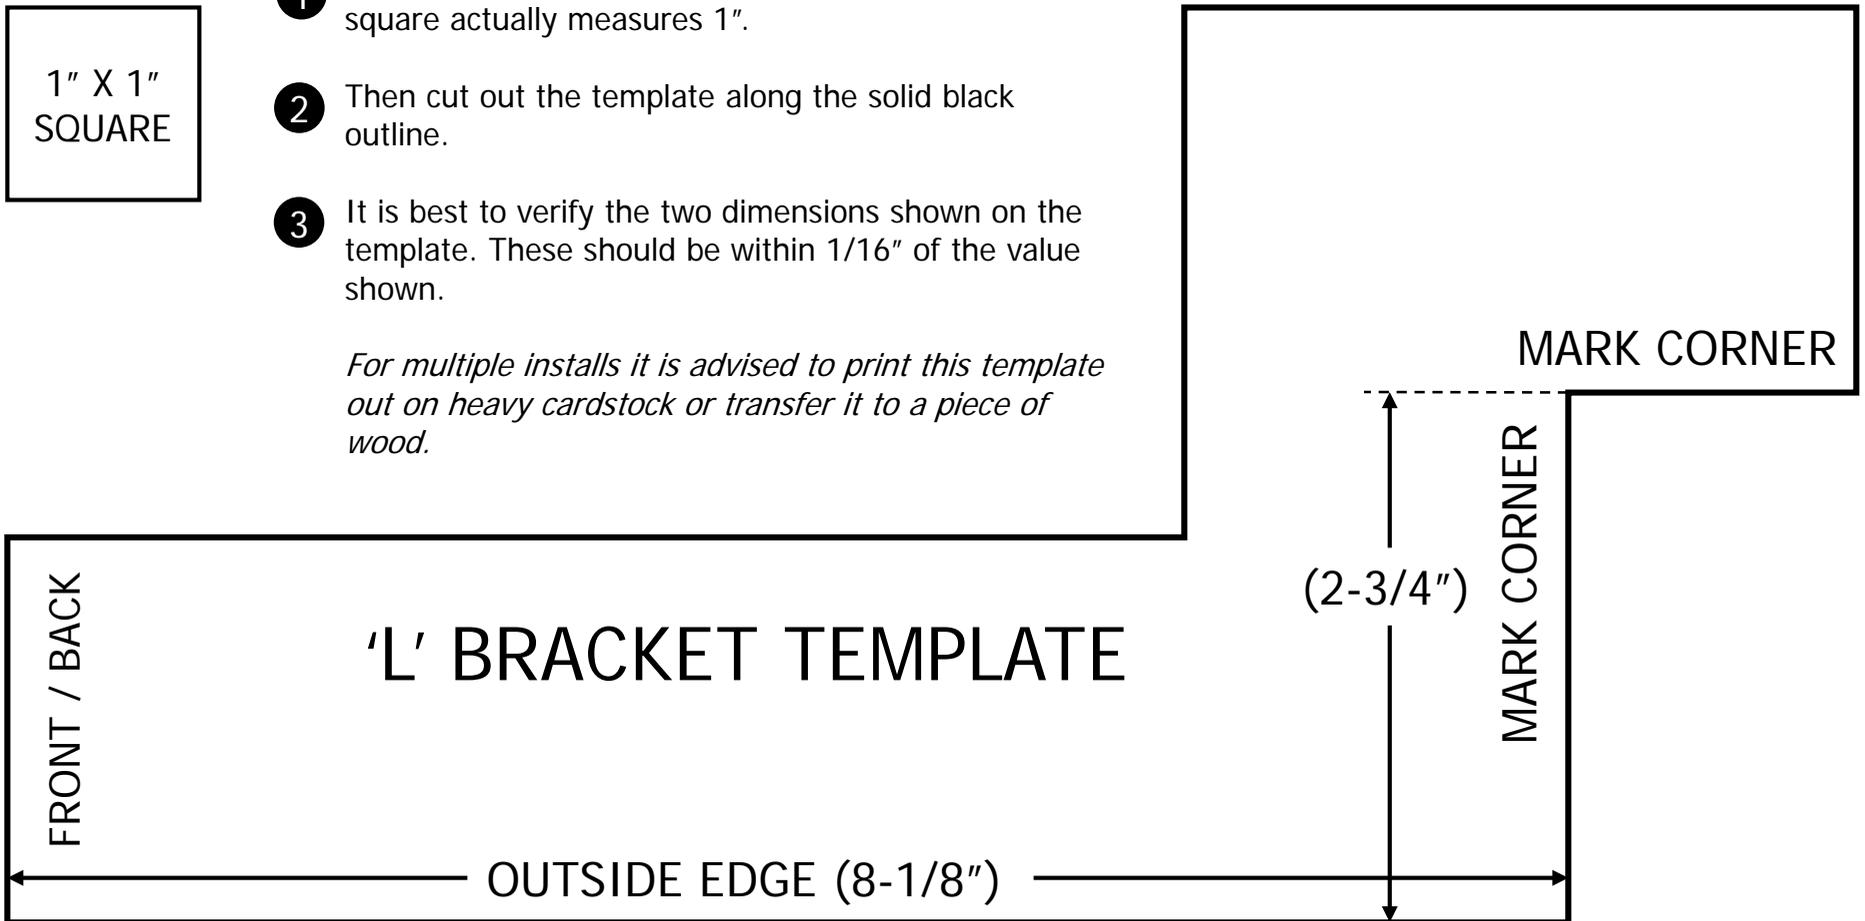

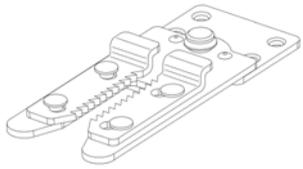

620-000GB Attachment Assembly Instructions

