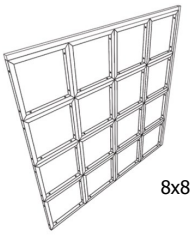

8x8

Square One | Indiana FURNITURE

Assembly Instructions

17-7

Tools Needed:

Drill

6mm Allen Key Driver Bit

5mm & 4mm Allen Keys

Box Level

Tape Measure

Ladder

2 to 3 Installers

NOTE: Anchoring to floor or wall may require additional tools and hardware. See note at end of instructions.

Components:



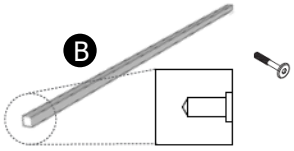

	Model	Description	17-7 Quantity
A	17-2424BL	Single Block, 24"x24" (4 Bolts & Nuts Included)	16
B	17-17596EC	End Cap, 96"	1 (used horizontally)
B	17-17597EC	End Cap, 97-3/4"	2 (used vertically)
C	17-LEVKIT	Leveler Kit, 2 Levelers	4

Before You Start:

- Reference local building and construction codes.
- Contact the building's Facility Manager for proper installation. Indiana Furniture does not provide floor or wall-mounting hardware.
- Requires two sides to be mounted/anchored, one to the wall and one to the floor.

800.422.5727 www.IndianaFurniture.com

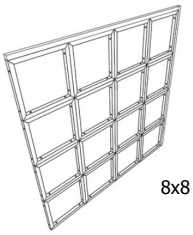

Square One | Indiana FURNITURE

Assembly Instructions

17-7

1. Begin by building the configuration 1 block high. To establish the configuration footprint.

2. Align the holes in blocks and connect with 2, 80mm bolts and 2, 17mm nuts.

   Fasten the bolt and nut together but do not over tighten because you will want to align and firmly tighten upon final setup.

3. In the bottom row of blocks install the levelers. Use the 6mm Allen Key Driver Bit to install the threaded insert into the bottom holes of the block.

   It is important that the threaded insert is installed as close to perpendicular as possible.

4. Thread the leveler into the insert. Then thread a 17mm nut onto the top of the leveler.

5. Connect a 97-3/4" End Cap to the wall section using the 60mm bolts and the threaded inserts in the post.

6. Using a box level to check level, adjust the levelers on the configuration so they are all touching the floor.

7. Install the rest of the blocks using the 80mm bolts and 17mm nuts until the configuration is built.

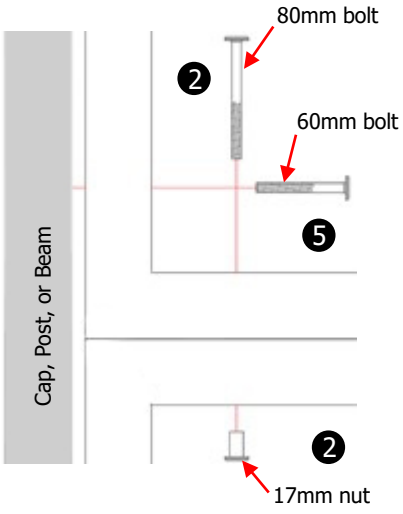

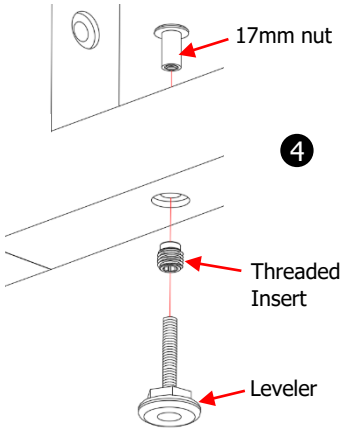

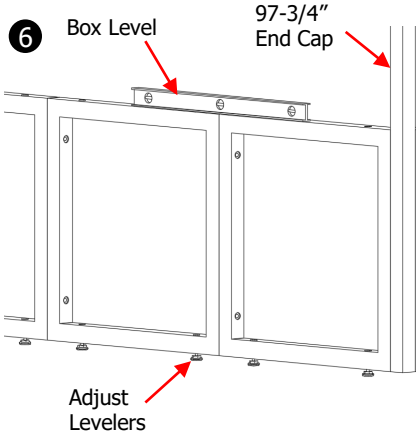

800.422.5727 www.IndianaFurniture.com

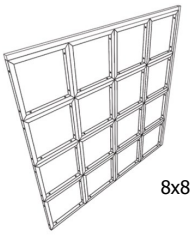

Square One | Indiana FURNITURE

Assembly Instructions

17-7

8. Fasten the last 97-3/4" End Cap to the wall vertically, where the unit is to be attached. Have a 1/2" – 5/8" gap between the floor and the bottom of the End Cap for the levelers. **See note about wall anchoring at the end.**

9. Secure the unit to the End Cap using the 60mm bolts.

10. Fasten the structure to the floor or ceiling. **See note about wall anchoring at the end.**

11. Using a ladder and an assistant, install the 96" End Cap on the top of the unit using the 60mm bolts.

12. Once everything is attached, go back and align components. This may require loosening bolts and nuts to align. Once adjusted to satisfaction, tighten hardware to a secure fit.

13. Your configuration is complete.

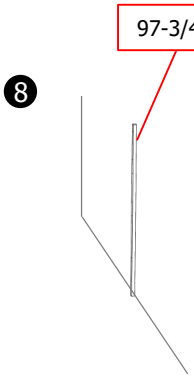

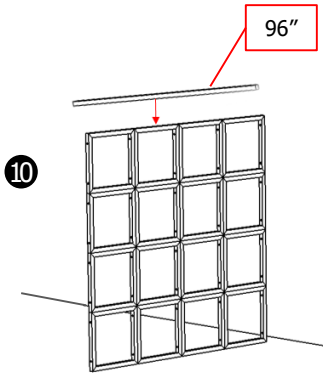

If adding Acoustical or Tackable Panels, Acrylic Inserts, Dry Erase Boards, or TV Mounts, see individual instructions for installation.
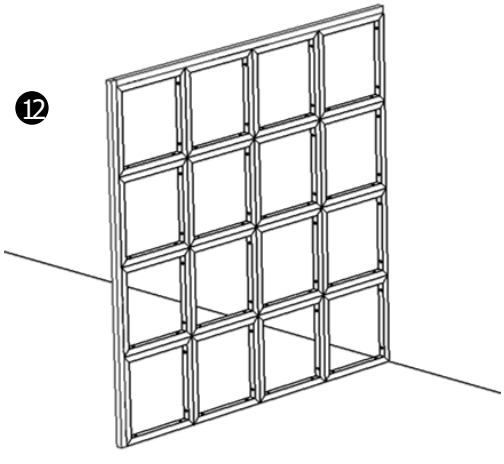
Wall / Floor Anchoring:
Additional support is required for configurations that are not free standing. Anchoring to the floor, wall, ceiling, and other furniture will require additional tools and hardware, not provided by Indiana Furniture. The installer is responsible for sourcing hardware and for the installation of support per building conditions.