


395GT Table Bracket | Indiana **Assembly Instructions**

Attach the 2 (two) 2209-00395T – L Bracket to the side frame of the Gleem+ chair using 4 (four) 2202-01078 - #10 x 7/8 Pan Head Screws. 2 (two) screws per bracket.




The 2 (two) 2209-00395T – L Bracket should be placed as shown.

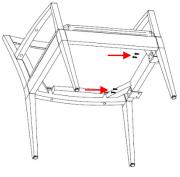

Repeat Step 1 for the second Gleem+ chair.





Attach the 395GT to Gleem+ chair by aligning the front edge of the table with the back of the front leg. Attach using 4 (four) 2202-01078 - #10 x 7/8 Pan Head Screws. 2 (two) screws per bracket.

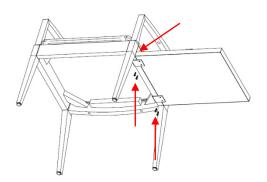





Repeat step 3 on the second Gleem+ chair.

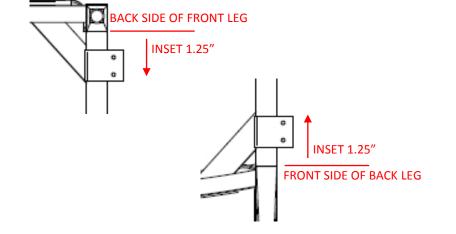




395GT is now installed.

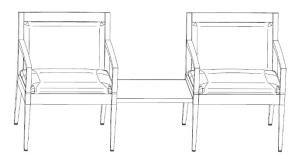




395GT Table Bracket | Indiana Assembly Instructions

Disassembly



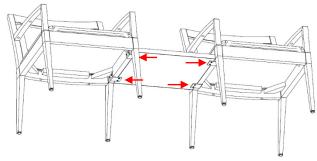




Remove 395GT.





Unscrew 4 (four) 2202-01078 - #10 x 7/8 Pan Head Screw. 2 (two) screws per bracket.

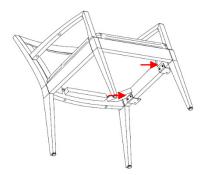



Remove 2 (two) 2209-00395T - L Bracket.

